



Maintenance Instructions

Wall Base, Vinyl Stair Treads, Accessories

NOTICE TO INSTALLER

THIS BROCHURE CONTAINS IMPORTANT INSTALLATION AND MAINTENANCE INFORMATION, AS WELL AS CAUTIONS AND WARNINGS. PLEASE MAKE CERTAIN THESE INSTRUCTIONS ARE PLACED IN THE HANDS OF THE FLOOR OWNER. OUR WARRANTY WILL BECOME EFFECTIVE ONLY IF THESE INSTRUCTIONS ARE FOLLOWED IN EVERY RESPECT. VPI'S EXCLUSIVE WARRANTY LIMITS VPI'S LIABILITY TO REPAIR, REPLACEMENT, OR CREDIT, AT VPI'S OPTION, ON VPIFLOOR PRODUCTS FOR WHICH A CLAIM HAS BEEN MADE ACCORDING TO VPI'S CLAIM PROCEDURE. CLAIMS FOR SURFACE DEFECTS OR VARIATIONS IN COLOR OR PATTERN MUST BE MADE TO VPI PRIOR TO INSTALLATIONS OF THE MATERIAL. FOR A COMPLETE STATEMENT OF VPI'S EXCLUSIVE WARRANTY, CONTACT: VPI, CUSTOMER SERVICE, P.O. BOX 451, SHEBOYGAN, WI 53082-0451.

(Vinyl Wall Base, Stair Treads, Stringer, Riser, Nosing) (Rubber Wall Base, Stringer, Riser, Accessories)

INITIAL MAINTENANCE

VIP VINYL STAIR TREADS

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth. Allow the adhesive on the treads to thoroughly dry before completing initial maintenance. Initial maintenance and normal maintenance procedures are as follows:

- Treads are maintained by hand.
- Wet mop using a vinyl floor neutral cleaner per directions.
- Rinse with clear water.
- Clean treads as conditions and soiling dictate.

VPI WALL BASE AND ACCESSORIES

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth. Allow the adhesive on the treads to thoroughly dry before completing initial maintenance. Initial maintenance and normal maintenance procedures are as follows:

- Wall Base and Accessories are maintained by hand.
- Wash with a wet cloth or wet mop using a vinyl floor neutral cleaner per directions.
- Rinse with clear water.
- Clean wall base and accessories as conditions and soiling dictate.

ROUTINE MAINTENANCE

VPI VINYL STAIR TREADS

These steps are completed based on soiling conditions of the flooring and usage.

- Treads are maintained by hand.
- Remove surface dirt by sweeping or vacuuming and wet mopping.
- Wet mop using a vinyl floor neutral cleaner.

- Rinse with clear water.
- Clean treads as conditions and soiling dictate.

VPI WALL BASE AND ACCESSORIES

- Wall Base and Accessories are maintained by hand.
- Wash with a wet cloth or wet mop using a vinyl floor neutral cleaner.
- Rinse with clear water.
- Clean wall base and accessories as conditions and soiling dictate.

YEARLY MAINTENANCE

VPI VINYL STAIR TREADS

These steps are completed based on soiling conditions of the flooring and usage.

- Remove surface dirt by sweeping or vacuuming and wet mopping.
- Wet mop using a vinyl floor neutral cleaner.
- For treads that are heavily soiled, a vinyl floor stripper can be used per directions.
- Vacuum or damp mop removing any residue. Repeat if necessary.
- Follow with a rinse of vinyl floor neutral cleaner.
- Rinse with clear water.
- Clean treads as conditions and soiling dictate.

For resolution of maintenance problems not covered in these instructions, contact VPI Corporation Customer Service, P.O. Box 451 Sheboygan, WI 53082-0451.



VPI Corporation, 3123 S.9th Street, PO Box 451, Sheboygan, Wisconsin 53082-0451 U.S.A.
Phone: (920) 458-4664 – Fax: (920) 458-1368 - Customer Service: (800) 874-4240
Email: floor@vpiflooring.com Website: www.vpiflooring.com